



NORMAL OPERATION

Press and hold the **^** button or the **v** button to adjust the height.

SET AND USE MEMORY PRESET OPTIONS

- Press and hold the **^** button or the **v** button to adjust, and release when at desired height.
- Press the **S** button and then press and release any of the **1** **2** **3** buttons, within 3 seconds.
- To return to a saved position, press and hold the chosen memory preset button until the desk reaches the saved height.

TOGGLE THE DISPLAY UNIT FORMAT

- Press and hold the **S** button and the **v** button simultaneously for 5 seconds.
- The height information will change between centimeters and inches .
- Release the **S** and the **v** buttons to complete.

TROUBLESHOOTING

- If the display reads “E02”, the frame has been moved too frequently. Let the frame cool down for 15 minutes.
- If the display reads “E03”, there is too much weight on the frame. Remove items from desk until display clears.
- If the display reads “E06”, there is a communication outage. Immediately check the connection between the handset and the control box.
- If the desk is not functioning properly, follow the reset procedure below.

Reset Procedure

- Press and hold **^** and **v** simultaneously for 5 seconds until both leg columns are in lowest position.
- Press and hold **^** and **v** buttons again until the desk lowers a little bit more, slightly rises, and stops. Release buttons.
- The system is now operational.

ADJUST THE ANTI-COLLISION SENSITIVITY

- Press and hold the **S** button for 5 seconds until screen flashes “_”.
- Release **S** button then press the **3** button for 3 seconds until screen displays a number between 0 (least sensitive) and 3 (highest sensitivity).
- Press the **^** or **v** buttons to adjust the sensitivity to desired level.
- Press the **S** button to complete.

PROGRAMMING ONE-TOUCH OR CONSTANT-TOUCH ADJUSTMENTS

- Press and hold the **S** button for 5 seconds until screen flashes “_”.
- Release **S** button then press the **1** button for 3 seconds until screen displays “H-0” (Constant-Touch) OR “H-1” (One-Touch).
- Press the **^** or **v** buttons to change to desired function.
- Press and hold the **2** button for 2 seconds and release.