



NORMAL OPERATION

Press and hold the **^** button or the **v** button to adjust the height.

SET AND USE MEMORY PRESET OPTIONS

- Press and hold the **^** button or the **v** button to adjust to the desired height.
- Press the **M** button and then press and release any of the **1** **2** **3** **4** buttons.
- To return the desk to a saved position, press and hold the chosen memory preset button until the desk reaches the saved height.

TROUBLESHOOTING

- If the desk is not functioning properly or the display reads **"RST"** please follow the reset procedure below.
- If the display reads **"Er1"** - **"Er13"** confirm that all wired connections are secure, then perform the reset procedure.
- If the display reads **"HOT"** let the frame cool down for 20 minutes.

Reset Procedure

- Press **v** button until both leg columns are in lowest position. Release the **v** button.
- Press and hold the **v** button again until the display reads **"RST"**. Release the **v** button.
- Press and hold the **v** button again until the desk lowers a little bit more, slightly rises, and stops. Release the **v** button.
- The system is now operational.

HANDSET LOCK

To lock the handset:

- Press and hold the **M** button for about 10 seconds until the display switches from **"S -"** to **"LOC"**.
- Release the button.

To unlock the handset:

- Press and hold the **M** button for about 10 seconds until the display switches from **"LOC"** to the height value display.
- Release the button.

PROGRAMMING ONE-TOUCH OR CONSTANT-TOUCH ADJUSTMENT

- Press and hold the **v** button until both leg columns are in the lowest position. Release the **v** button.
- Press and hold the **v** button again until the display reads **"RST"**. Release the **v** button.
- Press and hold the **1** button for about 5 seconds, the display will flash **"RST"** then switches to read either **"10.1"** (One-Touch) or **"10.2"** (Constant-Touch). Release the **1** button.
- Press the button again until the desired setting is reached and release. Wait about 5 seconds for the display to return to **"RST"**.
- Press and hold the **v** button until the desk lowers a little bit, slightly rises, and stops. Release the **v** button.