



## NORMAL OPERATION

- Press any button and display shows current height in centimeters (cm).
- Press ▲ or ▼ button to adjust the height
- When no button has been pressed for 30 seconds, the system goes to standby mode, and the display turns off. Press any button to wake the system and display current base height.

## SETTING AND USING MEMORY PRESET POSITIONS

- Adjust the desk to preferred height.
- Press any **one** of the ①②③④ buttons together with either ▲ or ▼ for 2 seconds to store the current height. Display shows **P1/P2/P3/P4** when the position has been stored.
- To return table/desk to a stored position, press and hold the chosen memory preset button ①, ②, ③ or ④ until the desk reaches the stored height.
- Memory presets can be overwritten with a new position at any time.

## CHANGE STARTING HEIGHT

- The default starting height is 25".
- To adjust the starting height, press ▼ button until reaching lowest position. At lowest position, press ▼ button again for 5 seconds until display starts flashing.
- During this time, press ▲ or ▼ buttons to adjust height to preferred starting position, and then press ▲ and ▼ buttons together for 3 seconds to store this position.
- Display stops flashing and the new starting height is shown in the display

## RESET PROCEDURE

- Press both ▲ and ▼ buttons at the same time until both leg columns are in lowest position.
- Display will show "000" while conducting reset.
- When controller box beeps, the buttons can be released and reset is complete.