


1 | FLIP AND ARRANGE

Flip all KOZE pieces you'd like to connect/link so they are laying with the backs down, and align the edges.

Voltee todas las piezas de KOZE que le gustaría conectar para que se coloquen con la parte posterior hacia abajo y alinee los bordes.

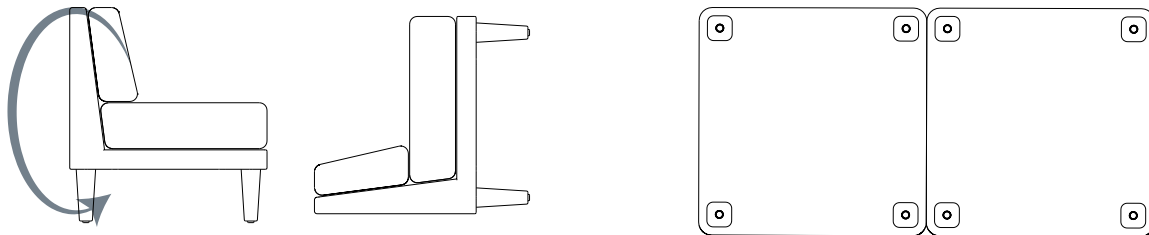

2 | MEASURE AND SECURE

Place first linking clip **7"** from the back edge and the second clip **7"** from the front edge of both KOZE pieces. Holes on clip should be inline with staples. Secure each clip with 4 wood screws (2 screws on each KOZE item you're connecting).

Repeat steps for all linking pieces.

***NOTE:** For curved pieces, have someone balance each piece while measuring and securing.

Coloque el primer clip de unión a **7"** desde el borde posterior y el segundo clip a **7"** desde el borde frontal de ambas piezas KOZE. Los agujeros en el clip se alinearan con las grapas. Asegure cada clip con 4 tornillos para madera (2 tornillos en cada pieza que esté conectando).

Repita los pasos para todas las piezas que serán conectadas.

*** NOTA:** Para piezas encorvadas, se necesitara que alguien mas balancee cada pieza mientras se miden y

