

# THREE60 PARSONS

Includes Optional Power and Wire Management Install


\*General Guide | See Master Plan

# THREE60 PARSONS

### **PARTS LIST**


ITEM CODE	QTY	PRODUCT CODE	
KIT-CPT424	1	Top Panel	$\Diamond$
KIT-CPT424	2	Side Panels	
KIT-CPT424	1	Modesty Panel	
CNWG	1	In-Surface Grommet	

Requires 4 wooden dowels, 2 cam locks and 3 cam pins.

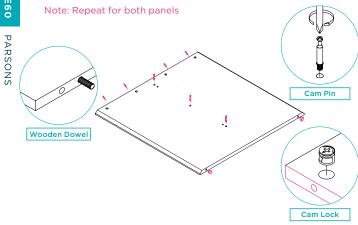


## 2 | ADD HARDWARE TO MODESTY PANEL

Requires 6 cam locks.

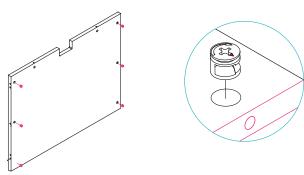


#### **3 | ADD HARDWARE TO TOP PANEL**

Requires 10 cam pins.

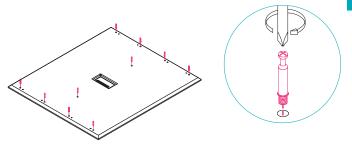


## **4 | CONNECT SIDE PANELS TO MODESTY PANEL**

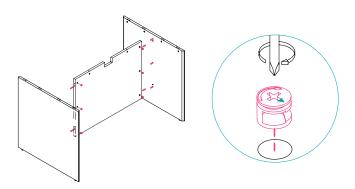


#### **5 | CONNECT TOP PANEL**

Lower top panel onto rest of assembly. Align cam pins on the top panel with the open cam locks on the modesty panel and side panels. Turn the cam locks with a screwdriver to lock the cam pins in place.

Place cam lock covers over cam locks for a polished look.

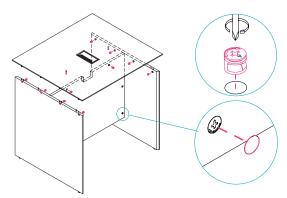

#### **6 | INSERT EMPTY POWER GROMMET**

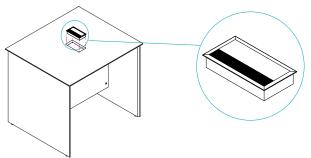


# THREE60 OPTIONAL POWER

#### **PARTS LIST**

ITEM CODE	QTY	PRODUCT CODE	
BPCONF2V2 or BPCONF3	1	In-Surface Power Module	
JC1	5	J-Clips	6
VB33	1	Cable Vertebrae	£ <del>ummum</del>


#### **OPTIONAL POWER MODULE INSTALL**

Attach 2 metal clips to the back of the module base then insert into the pre-cut holes in the surface.

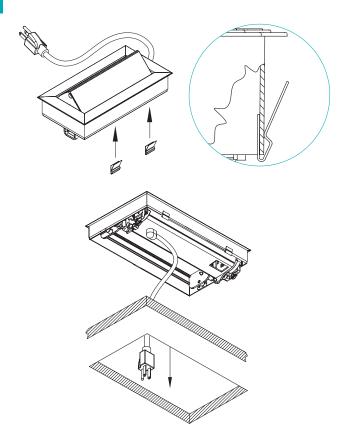

#### **OPTIONAL POWER MODULE INSTALL**


Insert the plastic clamps into the holes on the bottom of the module. Rotate and then push against the surface to clamp the module into place.

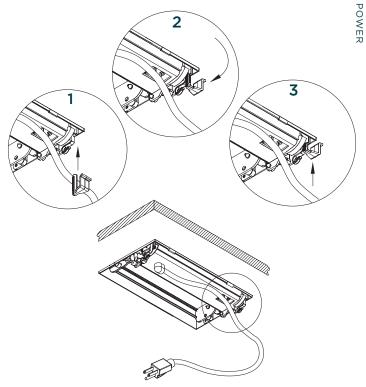


5

#### **OPTIONAL POWER MANAGEMENT J-CLIPS**

Remove adhesive tape and stick the j-clip to a clean dry surface. Insert 1 woodscrew through the j-clip and into the laminate panel for additional security..



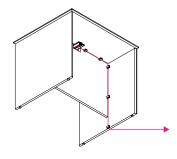



Workspace made easy

210.648.2095 | mycleardesign.com

© 2021 Clear Design. All rights reserved.